

#6 NEWSPAPER HOLDER INSTALLATION


SUPPLIES NEEDED:

#6 Newspaper Holder
(part - NPH 6)

NPH Straps - (2)
(part - NPH)

Screwdriver
phillips

**Pliers or
Small Wrench**

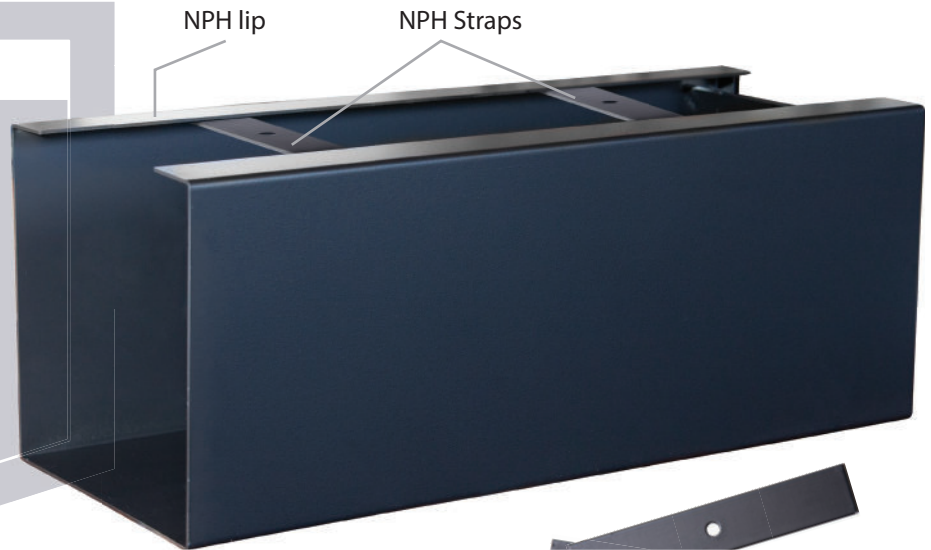

(2 screws/2 nuts are included with the straps)

SINGLE SYSTEM INSTALLATION:

- 1 Attach number plate to mailbox. Bolt box to post, do not tighten.
- 2 Insert bolts through holes inside of box. Pass through NPH strap and tighten, ensuring strap catches NPH lip. Back of box and NPH should be flush.
- 3 Tighten all bolts, and continue installation.

TWIN SYSTEM INSTALLATION:

- 1 Attach NPH's to each mailbox.
- 2 Bolt Twin T Bar to each NPH.
- 3 Insert S-Scroll into post and attach to hole in Twin T Bar.
- 4 Continue installation process.

