


**INSTALLATION INSTRUCTIONS FOR 12/120/130 TYPE COLLECTION BOX
(SEMI-RECESSED OR SURFACE MOUNTED)**

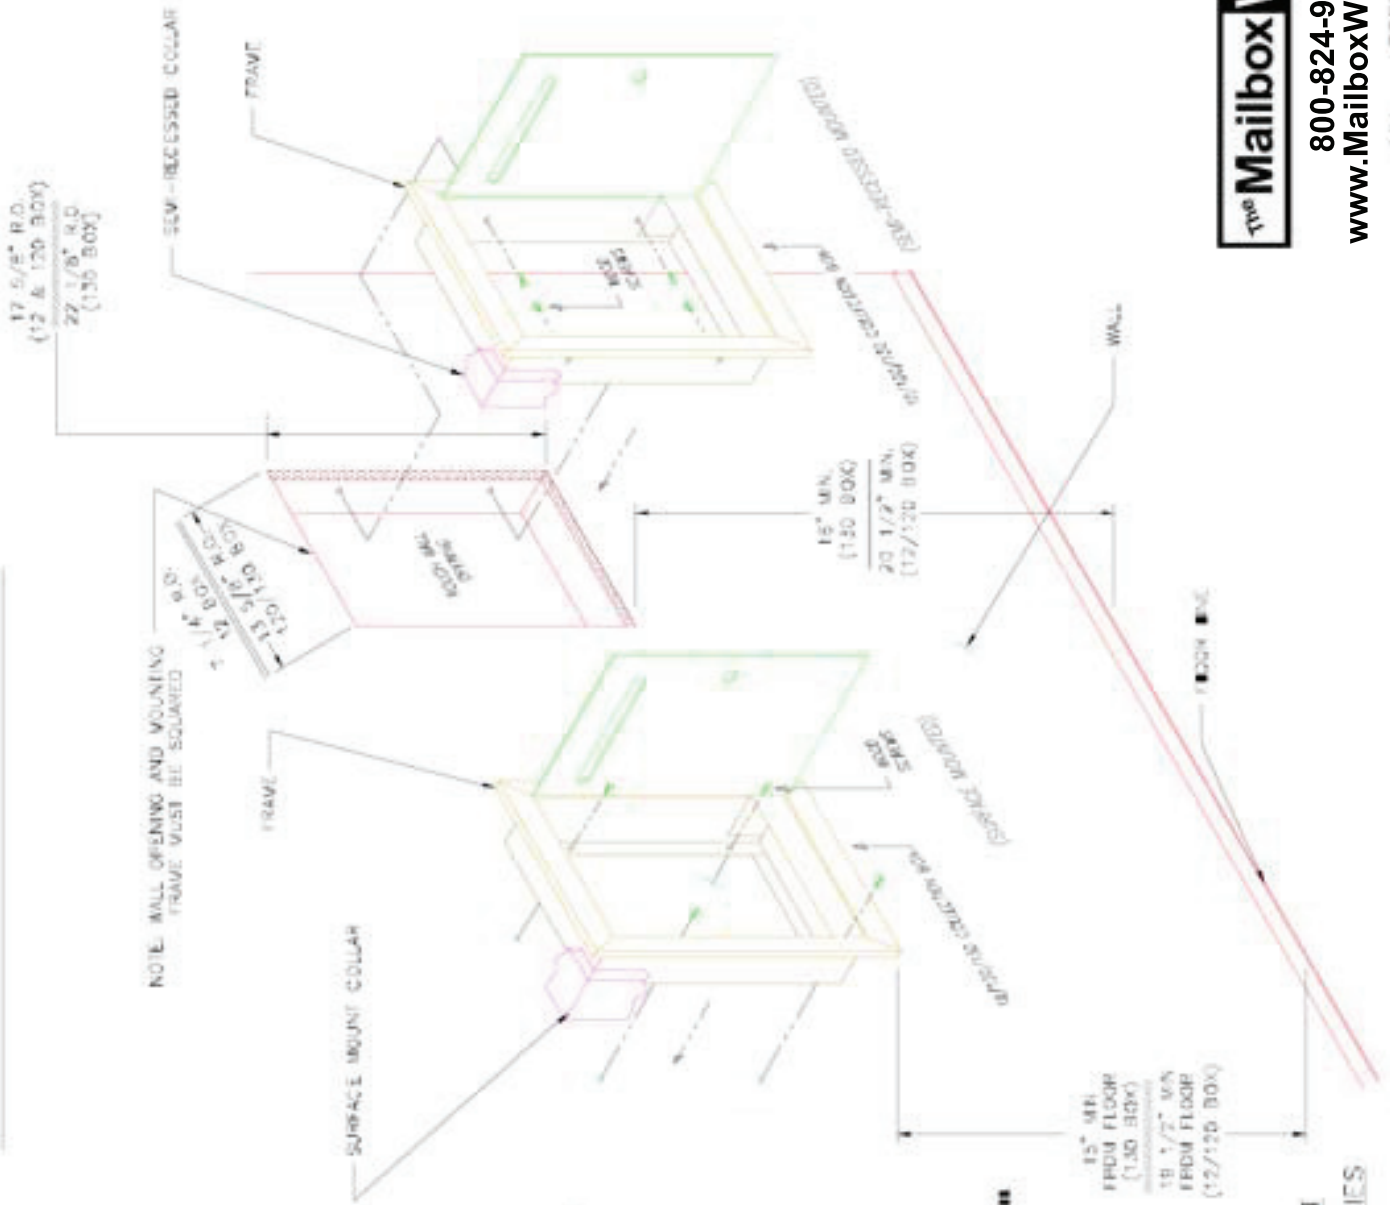

NOTE: WALL OPENING AND MOUNTING FRAME MUST BE SQUARED

- INSTALLATION NOTES FOR 12/120/130/130R**
- CUT AN OPENING IN THE WALL AT A DESIRED LOCATION IN ACCORDANCE WITH THE DIMENSIONED DRAWINGS AS SHOWN.
 - SEAL COLLAR ONTO WALL FROM THE REAR AND MOVE THE WAY TO THE FRAME. (SEE ILLUSTRATION)
 - INSERT COLLECTION BOX WITH COLLAR INTO OPENING.
 - DRILL (2) HOLES THROUGH THE SIDES OF THE COLLECTION BOX INTO THE FRAME OPENING FOR #8 SCREWS.
 - IF REQUIRED, REMOVE COLLECTION BOX FROM OPENING AND INCLUDE ANCHORS INTO MOUNTING HOLES.
 - MOUNT COLLECTION BOX INTO OPENING USING (4) #8 SCREWS (P/N 51295)

- INSTALLATION NOTES FOR 12/120/130/130R**
- PLACE COLLECTION BOX AGAINST THE WALL AT DESIRED LOCATION.
 - DRILL COLLECTION BOX DOOR USING THE PRE-DRILLED HOLES IN THE REAR PANEL OF THE BOX AS A TEMPLATE. MARK (4) MOUNTING HOLE LOCATIONS ON THE WALL.
 - DRILL (4) HOLES FOR #8 SCREW AT THE MARKS ON THE WALL.
 - IF REQUIRED, REMOVE COLLECTION BOX FROM THE WALL AND REVERSE ANCHORS INTO MOUNTING HOLES.
 - MOUNT COLLECTION BOX ONTO WALL USING (4) #8 SCREWS (P/N 51295)

USE OF COLLECTION BOXES ARE SUBJECT TO APPROVAL OF LOCAL POSTAL AUTHORITIES